

TECHNICAL BULLETIN TB06-2022

INSTALLING TRON 40VDR AIS INTO FB-40 BRACKETS , NEW OR PREVIOUSLY USED FOR TRON 40VDR



Float free bracket FB-40, new or previously USED FOR 40VDR can be relabeled using the label kits included in the below Tron 40VDR-AIS spare part kits:

- 88102 Spare FB-40 Bracket for Tron 40VDR AIS and Tron 40VDR
- 103742 Spare Tron 40VDR AIS EPIRB (without Storage Module)
- 103960 Spare Tron 40VDR AIS EPIRB w/Storage 80G Module
- 103440 Spare FB-40 / FBH-40 Front Cover for Tron40VDR AIS and Tron 40VDR

Before attaching the new labels, clean with Isopropanol / Isopropyl alcohol on all area's labels shall be fitted.

FB-40/ Tron 40VDR AIS:




- If any of the above-mentioned spare kits are purchased, the label kit shown above in the center picture shall be used to re-label old FB-40 brackets to correctly show relevant information when Tron 40VDR AIS is mounted within. The two bracket pictures on the left side of the label kit above are two variants of brackets delivered with Tron 40VDR, while the two bracket pictures to the right are the same brackets after label kits are mounted. More in detail below.
- Pictures below show with old labels on left and righthand side of brackets lower part





- example of cover label fitted (example shows only one, but all three shall be covered)

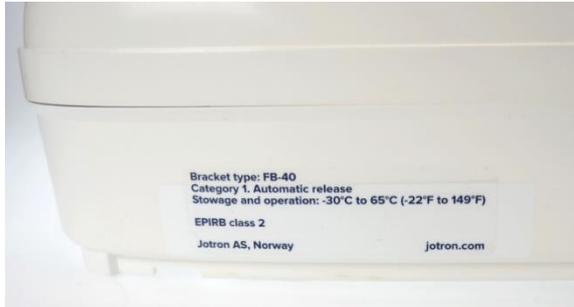

- and finally fitted with new label (left hand, lower side)

- And fitting the bracket cover label (example shows 2021 version, but same applies to the older ones)



The old and new labels may look almost the same, but with important difference in new Release tab and procedure on new label